

CeeNee Mini USER MANUAL

2013

Hello, my name is CeeNee Mini! Thank you for taking me home, it's nice to meet you.

I am a network media player that is capable of playing Full 1080P high definition content.

I can play streamed media contents over the Local Area Network (LAN) or online sources.

Connect a hard drive, and I can play your movies, music, karaoke, view photos, and flash applications.

Let's get set up, so we can start enjoying media!

Copyright© 2013 All rights reserved

CeeNee Inc.

Website: www.ceenee.com

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form by means of electronics, mechanical, photocopying, recording, or otherwise, without the prior written permission of CeeNee Inc.

Disclaimer

The information in the CeeNee product documentation and on this User Manual has been carefully checked and is believed to be accurate; however, no responsibility is assumed for inaccuracies.

CeeNee, Inc. reserves the right to make changes without further notice to any products to improve reliability, function or design. CeeNee, Inc. does not assume any liability arising out of the application or use of any product or circuit described; neither does it convey any license under its patent rights of others.

The CeeNee consumer product line is for home use only. The CeeNee general policy does not recommend the use of its consumer products in life support applications wherein a failure or malfunction of the product may directly threaten life or injury. Per the terms and conditions of sales of CeeNee, Inc., the user of CeeNee products in life support applications assumes all risks of such use and indemnifies CeeNee, Inc. against all damages.

TABLE OF CONTENTS

Disclaimer	2
Product Safety	4
Recording your CeeNee Product Information	5
Product Overview	6
Package Contents	6
Connections	7
Getting Started	8
Quick Start.....	8
Installation.....	8
Typical connection diagram for Karaoke	12
Using the CeeNee Mini media player	13
Using the Remote Control.....	13
Insert Remote Control Batteries.....	13
Usage & Navigation.....	15
Menus	15
Home	15
Video	16
Music	18
Photo.....	20
Karaoke.....	22
Applications.....	29
Settings	30
1. Video-Audio	31
2. Video.....	34
3. Music.....	34
4. Photo	35
5. Karaoke	37
6. System.....	43
7. Network.....	46
8. Shared Network	48
Codec support.....	50
Video Containers	50
Video Code Format	50
Audio Containers	51
Audio Codec Format	51
Photo Containers	51
CeeNee Technical Support.....	52
Troubleshooting	53
HISTORY	55

Product Safety

- Follow all instructions.
- Heed all warnings.
- Do not operate the device near water to avoid the risk of electric shock or damage.
- Do not throw, shake, or drop the device, otherwise damage may occur.
- Avoid exposing the product to moisture, high humidity, or dust.
- Do not attempt to repair or service the product yourself. Opening or removing the covers may expose you to the risk of high voltages, electric shock, and other hazards. If repair is required, please contact your dealer and refer all servicing to qualified service personnel.
- Do not touch the power cord during lightning. Avoid handling the power cord during electrical storms to avoid electric shock.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Do not overload power strips or extension cords. Overloading an electrical outlet can result in fire, electric shock, or device damage.
- Never push foreign objects into the device.
- Hold the outer power connector when removing the power cable. Pulling the power cable itself may damage the wires inside the cable, and it can cause fire, or electric shock.
Unplug this apparatus when it is not being used for an extended period of time.
- Do not spray chemical at, or near the device.
- Maintain a distance of at least 3 feet between the VO47L FHDTV10A and any heat source, i.e. radiator, heater, oven, amplifier etc.
- Do not operate the product close to smoke.
- Do not operate in a high heat environment over 95 degrees Fahrenheit.
- Do not use the product in an enclosed environment, or else the device may get damaged.
- Do not touch the connector with wet hands to avoid the risk of electric shock.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Operating environment. Temperature: 40°F ~ 95°F, Humidity: 20% ~ 80% non-condensing.
- For additional safety information, please refer to www.ceenee.com.

Recording your CeeNee Product Information

In the following table, please write the serial and model numbers of your new CeeNee Mini product.

You can find this information on the label at the bottom of the device. You should also note the date of purchase. This information may be required when requesting technical support.

Serial Number:
Model Number:
Purchase Date:
System and Software Notes:

Product Overview

This user manual provides step-by-step instructions for installing and using your new media player. For the latest CeeNee product information and news, please visit us at www.ceenee.com.

The CeeNee Mini HD Karaoke Network Media Player is an ultra-compact, high-definition (HD) USB 2.0 media player that attaches to an entertainment unit through a variety of audio/video interfaces and supports playback of major audio, video, and image file formats. It supports high-definition video playback of up to 1080p through an HDMI connection or standard definition for TVs with lower capabilities. High-fidelity digital audio is supported from an optical interface. A USB port and a SD card slot are available to connect major external storage devices. The included remote control lets you quickly browse through your media library and configure settings.

Package Contents

- CeeNee Mini HD Karaoke Network Media Player
- AC Adapter
- HDMI Cable
- Composite A/V Cable
- Remote Control
- 2 AAA Batteries
- Quick Start Guide

 
Connections

Front Panel



- | | |
|----------------------|----------------------|
| 1. USB Port | 4. Power LED Light |
| 2. USB LED Light | 5. Infrared Receiver |
| 3. SD Card LED Light | 6. SD Card Slot |

Back Panel

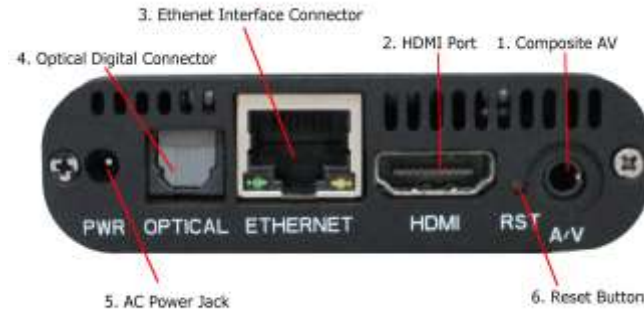

- | | |
|---------------------------------|------------------------------|
| 1. Composite AV | 4. Optical Digital connector |
| 2. HDMI port | 5. AC Power Jack |
| 3. Ethernet Interface connector | 6. Reset button |

Connecting devices

1. USB external drive
2. SD/SDHC Card
3. Network storage devices

Getting Started

Quick Start

Connect the CeeNee Mini media player to your TV or entertainment unit through the desired interface option.

1. Insert the Network cable if applicable.
2. Connect the optical digital cable if applicable.
3. Connect the AC adapter.
4. Insert two AAA batteries into the remote control device.
5. Insert USB Hard Drive, and/or SD card, and/or USB Flash drive (not included) that store(s) your favorite movies, music, karaoke songs, flash applications (including games) and photos to the player.
6. Wait a moment for me to search for content, and then enjoy!

Installation

Step 1: Connect the CeeNee Mini media player to your TV or entertainment unit through the desired interface option.

The below figures illustrate the cable connections supported by the CeeNee Mini media player. The standard connection uses the included composite AV cables.

Choosing the Best Connection

The quality of the media contents depends on the quality of your TV and its connection to the CeeNee Mini media player.

Connection	Quality	Connections
HDMI	BEST	Specialized, high- definition connector
COMPOSITE	GOOD	<ul style="list-style-type: none"> • Yellow = video • Red = right audio • White = left audio



High Definition TV



Standard Definition TV

Step 2: To connect the player to the Internet/Network:

- Connect the Ethernet cable (not included) to the CeeNee Mini Ethernet connector



Step 3: To utilize the optical digital sound:

- Connect the optical cable to CeeNee Mini optical connector (Optical digital cable is not included).



Step 4: Connect the AC adapter to the wall unit and to CeeNee Mini



Step 5: Connect USB Hard Drive, and/or SD card, and/or USB Flash drive (not included) to the CeeNee Mini media player.



- Please wait a few moments while the CeeNee Mini media player scans the USB device or the SD card for the media files. In the case of the USB Devices, this may take a few minutes, depending on the storage capacity of the USB device and the number of available media files. When the external device is detected, the respective status light turns on and the Home screen displays the new USB directory icon or the SD card icon whichever is applicable.


- Remove the USB Device or SD card

To prevent data loss, we highly recommend that the user removes the storage device properly following the below procedure.

To remove a USB device or an SD card:

- Press the **EJECT** button on the remote.
- Select the desired device you want to remove.
- Highlight **OK** on the prompt and then press the **OK** button on the remote.
- Disconnect the ejected device from the CeeNee Mini media player.

Typical connection diagram for Karaoke

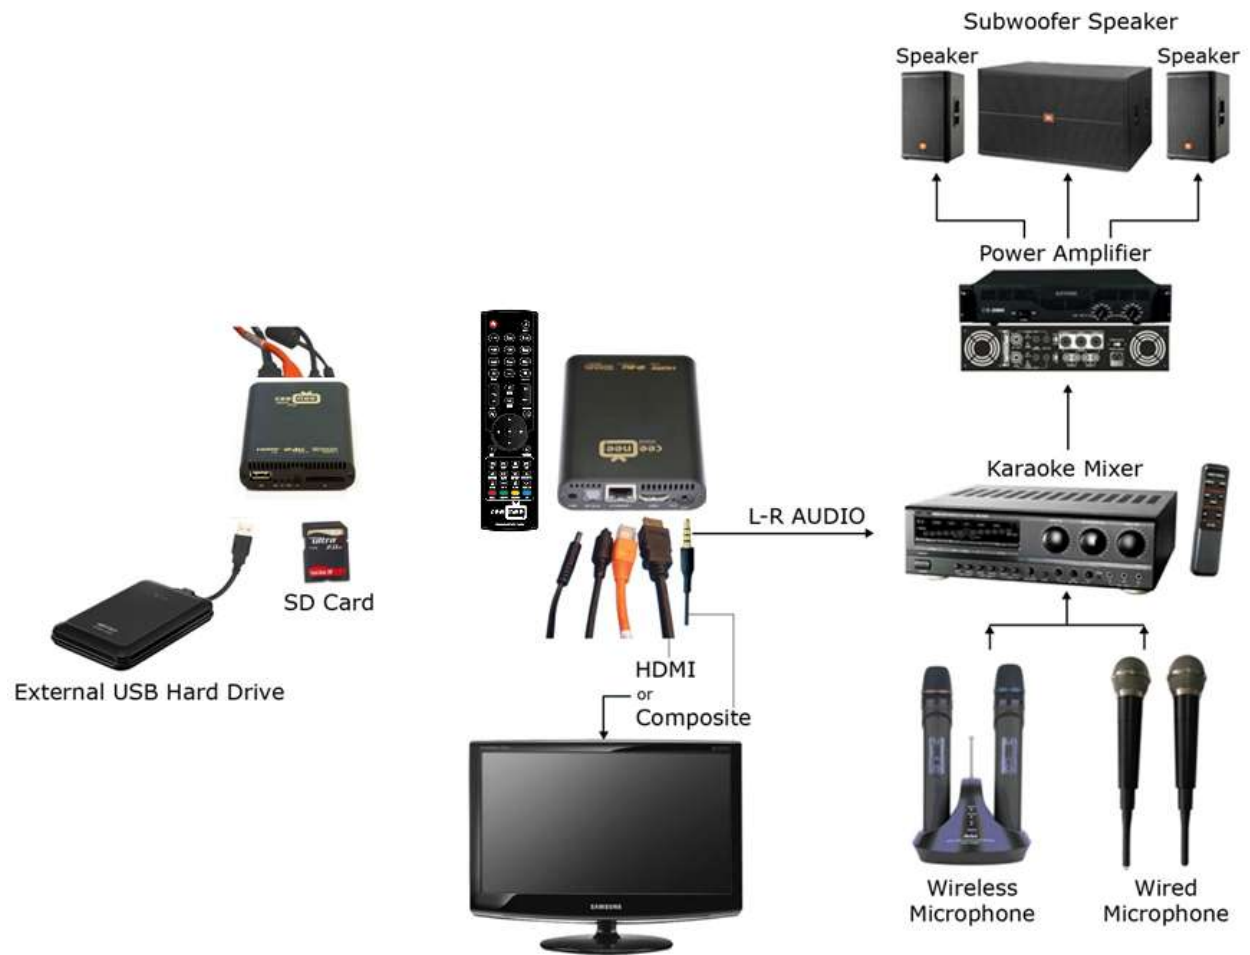

Using the CeeNee Mini media player

Using the Remote Control

The CeeNee Mini remote control lets you navigate the Home screen, browse for media files, enable playback options, and customize the system settings. The infrared sensor detects infrared signals from the remote.

Insert Remote Control Batteries

1. Remove the battery cover.



2. Insert the batteries corresponding to the (+) and (-) marks on the battery compartment.




3. Reattach the battery cover.



Remote Control

1. **POWER:** Switch the power on/off
2. **EJECT:** Eject-safely an attached folder from shared network: from a USB or a SD card
3. **NUMBER PAD:** Searches by video/song/photo/application name by alphanumeric keys. Press multiple times on the numeric key cycles through numbers and letters.
4. **MENU:** Toggle the menu bar
5. **DELETE:** Delete input character or delete a queue song in Karaoke
6. **VOL +/-:** Volume Up/Down adjustment
7. **MUTE:** Turn the sound on/off
8. **AUDIO:** Select audio channel
9. **▶▶:** Next track
10. **◀◀:** Previous track
11. **HOME:** Exit back to the homepage
12. **RETURN:** Navigate back to the previous screen
13. **4 WAY NAVIGATION ARROWS:** Navigate through the menu
14. **OK:** To choose a selection
15. **INFO:** Display main/sub-screen picture source
16. **TIME SEEK:** Play at time which is being selected

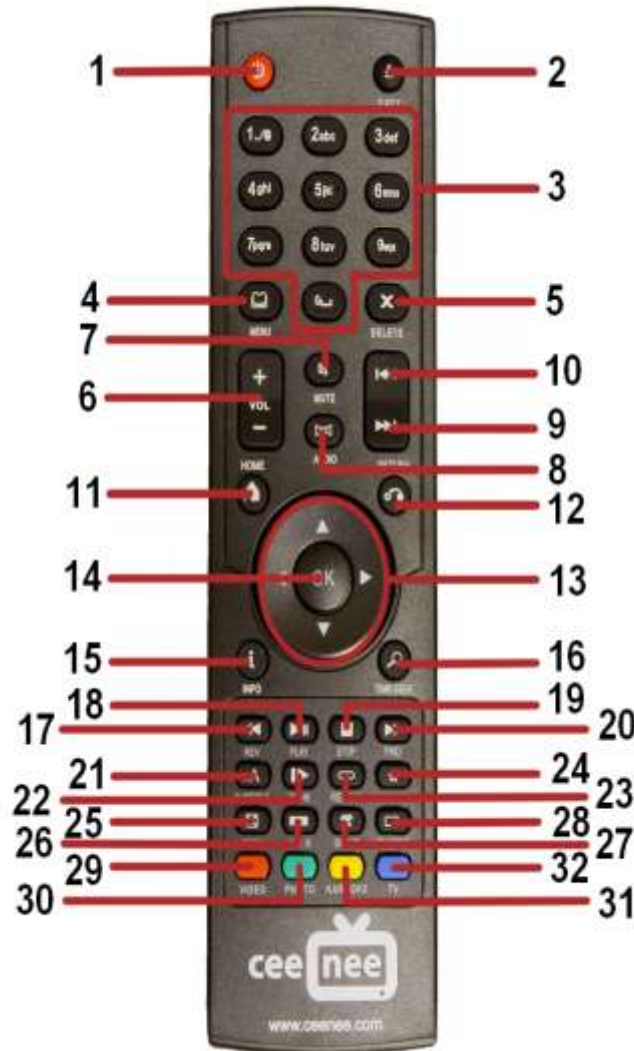

17. **REV:** Backward
18. **PLAY:** Play/Pause
19. **STOP:** Halt play and return to the list
20. **FWD:** Forward
21. **SUBTITLE:** Switch subtitles
22. **SLOW:** Do not support
23. **REPEAT:** Switch modes: Normal, Repeat One, Repeat All, Shuffle, Repeat All and Shuffle
24. **BOOKMARK:** Do not support
25. **ZOOM:** Zoom frame (support only video and photo)
26. **16:9:** Switch Aspect ratio: Normal/Widescreen
27. **SETUP:** Go to Settings interface
28. **TV Mode:** Do not support
29. **VIDEO:** Go to Video
30. **PHOTO:** Go to Photo
31. **KARAOKE:** Go to Karaoke
32. **TV:** Do not support

Usage & Navigation

Menus

- Use the 4-way arrows on the remote control to navigate through the menu. Press the “OK” button to select a feature, and then press the “RETURN” button to go back.
- Turn on the CeeNee OMP Player for the first time may take a few moments for the Navigation Home to display.
- **Ejecting a Disk:** Press the “EJECT” button on the remote control.

Home

The navigation is split into several parts. The left side of the screen shows Video, Music, Photo, Karaoke, Applications and Settings. The center shows RSS feeds, and the right side shows time, weather, and stock.




Video

1. Two methods to go to Video interface:
 - Select the “Video” tab in the CeeNee Mini homepage, and then press the “OK” button on the remote.
 - Press the “VIDEO (RED)” button on the remote when you are viewing the interfaces such as Home page, Music, Photo, Application list, Karaoke, Settings.
2. Organizing videos: Folder, All Videos, and Search



3. In the video browser screen:
 - a. Press the “OK”, “PLAY” or “RIGHT ARROW” button and then select a USB, a SD card or shared directories from a Local Network.
 - b. Searching: Use the NUMBER PAD and press “OK” to search. Press the “DELETE” button if you need to delete a character in the search box.
 - c. Press the ►► or ◀◀ button to display the next/previous page in the video list.
 - d. Press “OK”, “PLAY” or “RIGHT ARROW” button on the remote to play a video.
 - e. Press the “PHOTO (GREEN)” button to go to PHOTO interface.
 - f. Press the “KARAOKE (YELLOW)” button to go to KARAOKE interface.
 - g. Press the “SETUP” button to go to SETTINGS interface.
 - h. Press the “RETURN” button to go back to the previous screen.
 - i. Press the “HOME” button to exit back to the home page.

4. In the video player screen:
 - a. When playing a video, if the program displays “Resume?” message:
 - Press “YES” to start playing the video again after being interrupted
 - Press “NO” to play the video from scratch.
 - b. Press the “INFO” button to bring up the playback options such as fast forward, pause, play, and stop.

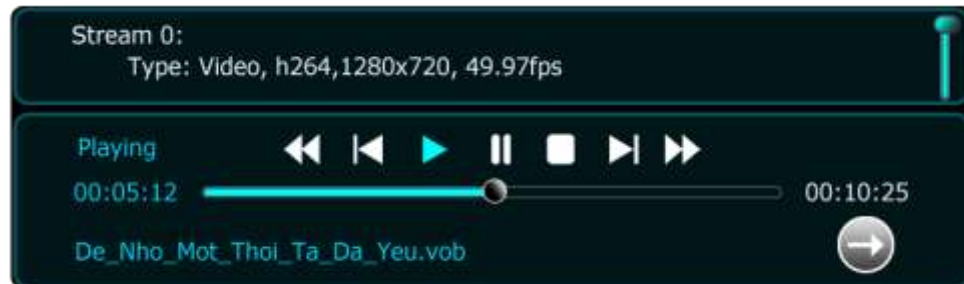

- c. Press the “MENU” button to bring up the selections such as Audio Channel, Subtitles, Zoom in, Zoom out, Move, Restore, and Repeat.



- d. Press the ►► or “RIGHT ARROW” button to play the next video.
 - e. Press the ◀◀ or “LEFT ARROW” button to play the previous video.
 - f. Press the “FWD” button to fast forward the video.
 - g. Press the “REV” button to backward the video.
 - h. Press the “PLAY” button to play/pause the video.
 - i. Press the “STOP” button to stop the video.
 - j. Press the “TIME SEEK” button to play the video at time which is being selected.
 - k. Press the “MUTE” button to turn the sound on/off.
 - l. Press the “VOL+/- ” to adjust volume up/down.
 - m. Press the “AUDIO” button:
 - Depending on the media, if containing more than one soundtrack you can press the audio button to select accordingly.
 - While playing a video, press AUDIO with “LEFT, RIGHT, UP or DOWN ARROW” to select the available soundtrack.
 - It may take a few seconds to change audio track because it has to sync.
 - n. Press the “SUBTITLE” button and use the “LEFT, RIGHT, UP or DOWN ARROW” button to switch the subtitles.

- o. Press the “REPEAT” button and use the “LEFT, RIGHT, UP or DOWN ARROW” button to switch modes: Normal, Repeat One, and Repeat All.
- p. Press the “ZOOM” and “RIGHT or UP ARROW” button to zoom in the frame or “LEFT or DOWN ARROW” button to zoom out the frame.
- q. Press “16:9” button to switch Aspect ratio: Normal/Widescreen.
- r. Press the “PHOTO (GREEN)” button to go to PHOTO interface.
- s. Press the “KARAOKE (YELLOW)” button to go to KARAOKE interface.
- t. Press the “SETUP” button to go to SETTINGS interface.
- u. Press the “RETURN” button to go back to the previous screen.
- v. Press the “HOME” button to exit back to the homepage.

Music

1. Playing music: select the “Music” button in the CeeNee Mini homepage, and then press “OK” or “PLAY” button on the remote to select the music.
2. Organizing music: Folder, All Music, and Search.



3. In the music browser screen:
 - a. Press the “OK”, ”PLAY” or “RIGHT ARROW” button to select a USB, or a SD card, or shared directories from Local Network.
 - b. Searching: Use the NUMBER PAD and press “OK” to search. Press “DELETE” button if you need to delete a character in the search box.
 - c. Press the ►► or ◀◀ button to display the next/previous page in the music list.

- d. Browse to the music to play, and select the song by pressing “OK”, “PLAY” or “RIGHT ARROW” button on the remote.
 - e. Press the “VIDEO (RED)” button to go to VIDEO interface.
 - f. Press the “PHOTO (GREEN)” button to go to PHOTO interface.
 - g. Press the “KARAOKE (YELLOW)” button to go to KARAOKE interface.
 - h. Press the “SETUP” button to go to SETTINGS interface.
 - i. Press the “RETURN” button to get back to the previous screen.
 - j. Press the “HOME” button to get back to the home page.
4. In the music player screen:



- a. Press the ►► or “RIGHT ARROW” button to play the next music.
- b. Press the ◀◀ or “LEFT ARROW” button to play the previous music.
- c. Press the “FWD” button to forward the music.
- d. Press the “REV” button to backward the music.
- e. Press the “PLAY” button to play or pause the music.
- f. Press the “STOP” button to halt play and return to the list.
- g. Press the “MUTE” button to turn the sound on/off.
- h. Press the “VOL+/-” to adjust the volume up/down.
- i. Press either the “REPEAT” or “MENU” button and then press “OK” to switch modes: Normal, Repeat One, Repeat All, Shuffle, Repeat All and Shuffle.
- j. Press the “VIDEO (RED)” button to go to VIDEO interface.


- k. Press the “PHOTO (GREEN)” button to go to PHOTO interface.
- l. Press the “KARAOKE (YELLOW)” button to go to KARAOKE interface.
- m. Press the “SETUP” button to go to SETTINGS interface.
- n. Press the “RETURN” button to get back to the previous screen.
- o. Press the “HOME” button to get back to the homepage.

Note:

- You still can continue to listen to music if you return to HOME page, browse video list, or view a photo.
- When pressing the STOP button, opening a video, going to Karaoke, Applications or Settings, the music will be stopped.

Photo


1. Two methods to go to Photo interface:
 - Select the “Photo” tab in the CeeNee Mini homepage, and then press the “OK” button on the remote.
 - Press the “PHOTO (GREEN)” button on the remote when you are viewing the interfaces such as Home page, Video, Music, Karaoke, Application list, Settings.
2. Organizing photo: Folder, All Photos, and Search.

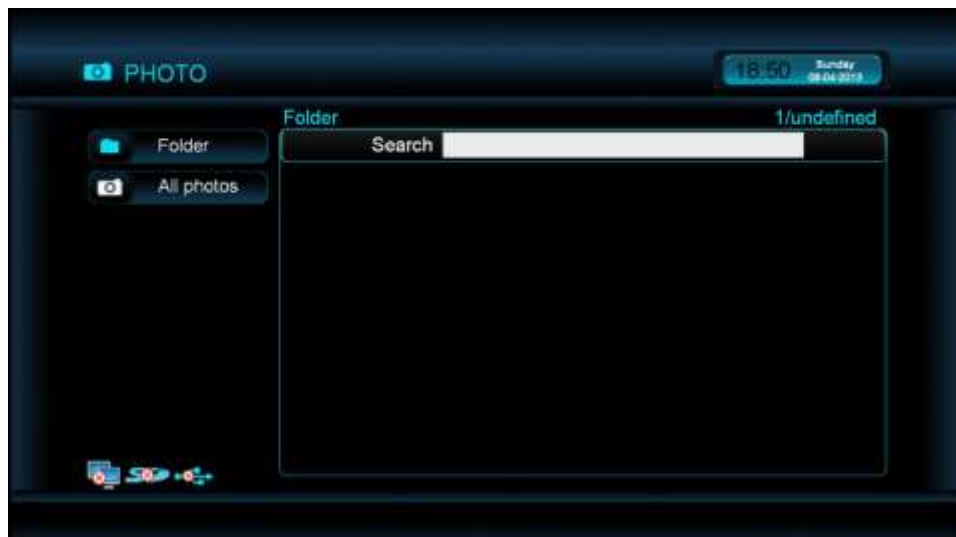

3. In the photo browser screen:
 - a. Press the “OK”, ”PLAY” or “RIGHT ARROW” button to select a USB, a SD card or shared directories from Local Network.
 - b. Searching: Use the NUMBER PAD and press “OK” to search. Press “DELETE” button if you need to delete a character in the search box.
 - c. Press the ►► or ◀◀ button to display the next/previous page in the photo list.
 - d. Browse to the photo to view, and select the photo by pressing “OK” or “RIGHT ARROW” button on the remote.
 - e. Select the photo on the list and press the “PLAY” button on the remote to view photo slide.
 - f. Press the “VIDEO (RED)” button to go to VIDEO interface.
 - g. Press the “KARAOKE (YELLOW)” button to go to KARAOKE interface.
 - h. Press the “SETUP” button to go to SETTINGS interface.
 - i. Press the “RETURN” button to get back to the previous screen.
 - j. Press the “HOME” button to get back to the home page.

4. In the photo player screen:

- a. Press the “INFO” button to view photo’s information.

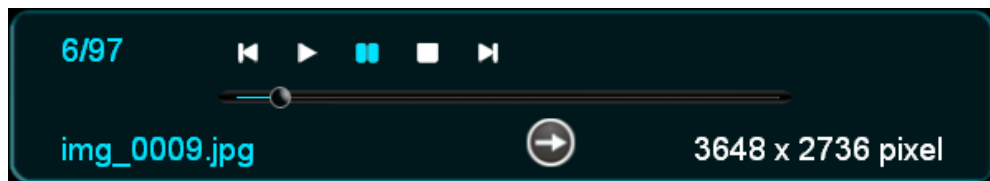

- b. Press the “MENU” button to bring up the selections such as Move, Rotate Right, Rotate Left, Zoom in, Zoom out, Restore and Repeat.



- c. Press the ►► or “RIGHT ARROW” button to view next photo.
- d. Press the ◀◀ or “LEFT ARROW” button to view previous photo.
- e. Press the “PLAY” button to play/pause the photo (when view slide photo).

- f. Press the “STOP” button:
 - To halt play and return to the list.
 - If user is viewing photo and listing to music, press the “STOP” button to halt play photo and return to the list, and then press the “STOP” button again to stop the music.
- g. Press the “MUTE” button to turn the sound on/off (if user view photo and listen to music concurrently).
- h. Press the “VOL+/-” to adjust the volume up/down (if user view photo and listen to music concurrently).
- i. Press the “REPEAT” button and use the “LEFT, RIGHT, UP or DOWN ARROW” button to switch modes: Normal, Repeat one, Shuffle, and Repeat All.
- j. Press the “ZOOM” button then the “RIGHT or UP ARROW” button to zoom in the photo, or either the “LEFT or DOWN ARROW” button to zoom out the photo
- k. Press the “VIDEO (RED)” button to go to VIDEO interface.
- l. Press the “KARAOKE (YELLOW)” button to go to KARAOKE interface.
- m. Press the “SETUP” button to go to SETTINGS interface
- n. Press the “RETURN” button to get back to the previous screen
- o. Press the “HOME” button to get back to the homepage

Karaoke

The CeeNee Karaoke Player is a full featured sing-along player. There are functions to create a song booklet, queue songs, and modify playlists.

 
Navigating the Choose Song Menu

1. Playing a Song: Two methods to go to Karaoke interface:

- Select the “Karaoke” tab on the CeeNee Mini homepage, and then press the “OK” button on the remote.
- Press the “YELLOW” button on the remote when you are viewing the interfaces such as Home page, Video, Music, Photo, Application list, Settings.

2. If on screen displays the “*Empty. Please press SETUP button on remote control*” message, you have to [go into](#) “Settings -> Karaoke -> Select Folder (if you select “HD Karaoke”)” to add any folder containing Karaoke files. Return to Karaoke interface after adding successfully.

3. Select a song from the karaoke song list, and press the “PLAY” button to play.
4. **Organizing karaoke:** Organize songs by All songs, Folder, Playlist, and Recent

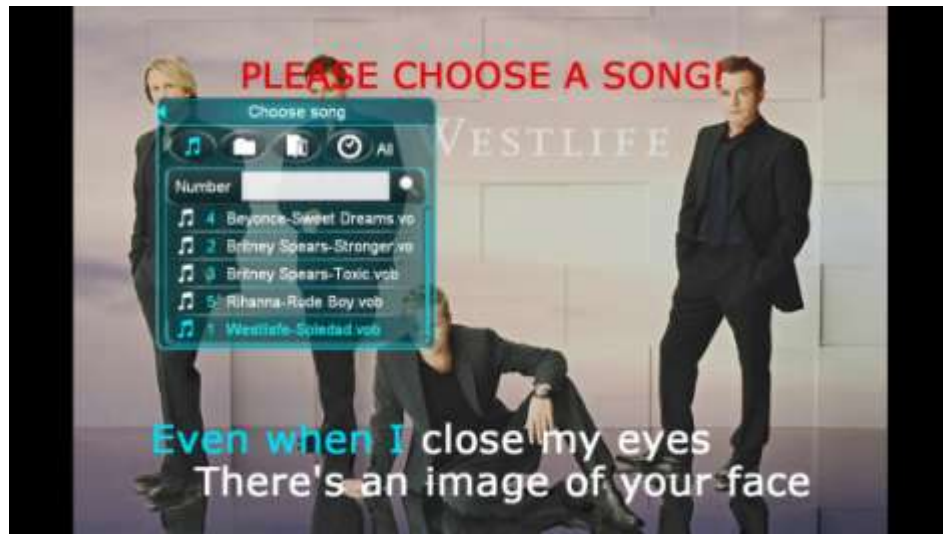

5. **Searching:**

- a. Quick search: Before finding a song, you must turn off the menu interface by pressing the “MENU” button. Next, use the NUMBER PAD and press “OK” to select the song



- b. Normal search: Press the “MENU” button to display menu interface. Then, press the “LEFT ARROW” button and select **Search Option** tab to select an option:
- Select “**Search for song’s number**” to type numbers
 - Select “**Search for song’s name**” to type characters
 - Select “**Search for song’s name and automatic show special characters**” to type special characters (e.g. “lân”, “lạn”)



Return to “Choose Song Menu”, use NUMBER PAD and press “OK” button to search. If you need to delete the input text in the search box, press “DELETE” button.




After selecting “Search for song’s number” option



After selecting “Search for the song’s name” option

6. **Create Book:** press the “MENU” button to display menu interface. Then, press the “LEFT ARROW” button and select the “Create Book” tab will enable the user to save and update a Karaoke song book, which the user can print out.

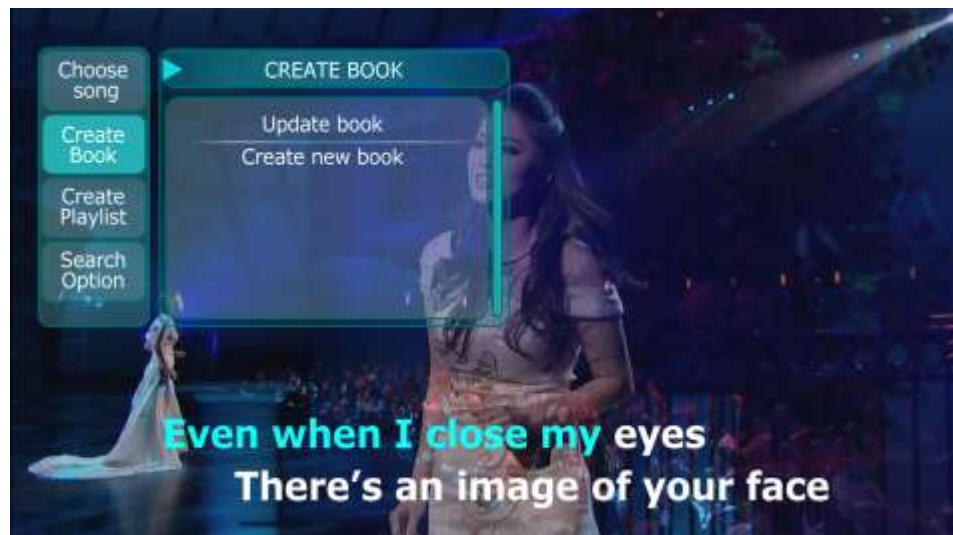


- a. Update book: Assign ID for new songs and update them into the end of the existing book
- b. Create new book: Create a printable Excel file with the song number and song title, which the user can then print—the file will be saved in the location specified by the user. This song book is helpful in browsing/queuing songs while others are singing. A song book only includes all songs in active devices.

7. **Create Playlist:** press the “MENU” button to display menu interface. Then, press the “LEFT ARROW” button and select the “Create Playlist” tab, continue to press the “RIGHT ARROW” button, select “Create new playlist” and press “OK” button will enable the user to save and update a song list to play.




Select a song and press “OK” button to insert it into the playlist. After that, you name your playlist.

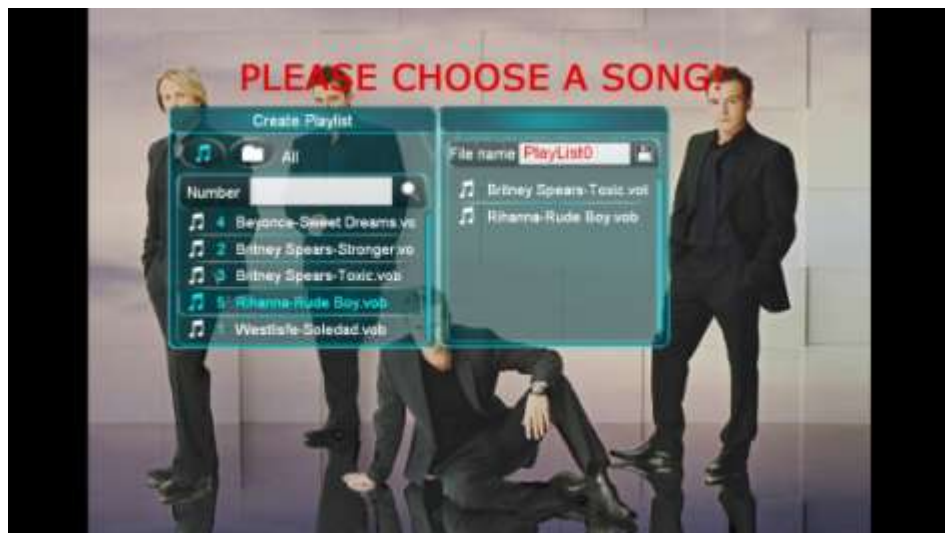

Save the playlist, go back to the main menu, and select the playlist icon to choose a playlist.

At the “Create Playlist” interface, press the “RIGHT ARROW” button to choose a playlist:

- Press “OK” button if you need to rename or change its content
- Press “DELETE” button to delete it

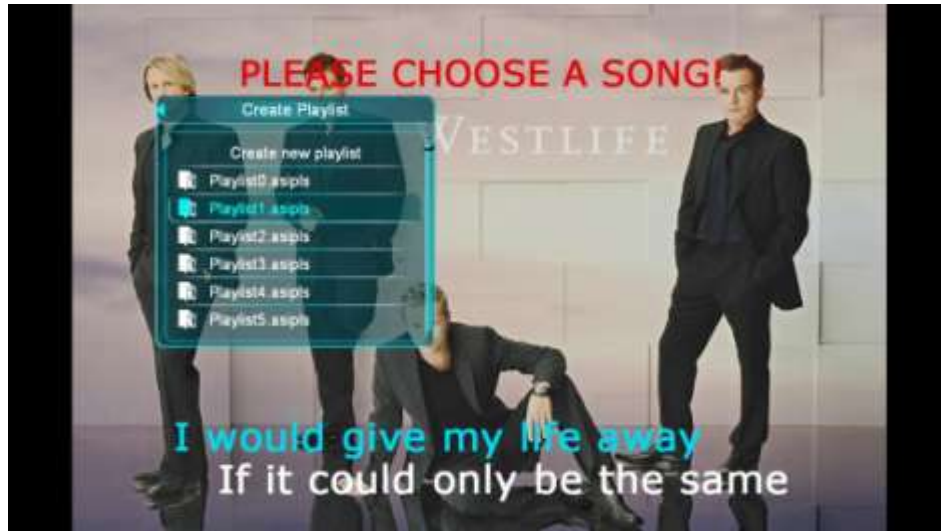

8. To insert a song to the top of queue songs:

- After everyone has selected his/her song from the Choose Song Menu, a list of songs will be displayed on the top screen. Then use the “LEFT or RIGHT ARROW” button to move the yellow rectangle to the song which you wish to insert and press “OK” button on remote control.



9. To delete a song on queue songs:


- Select a song on queue songs by using the “LEFT or RIGHT ARROW” button and press the “DELETE” button

10. Karaoke Playback Menu

- a. Press the “MENU” button to toggle on/off the “Choose Song Menu”.
- b. Press the “MUTE” button to turn the sound on/off.
- c. Press the “VOL+/-” to adjust the volume up/down.
- d. Press the “AUDIO” button to select an Audio Channel.
- e. Press the ►► button to play the next song in the queue.
- f. Press the “PLAY” button to play/pause the current song.
- g. Press the “STOP” button to stop playback.
- h. Press the “FWD” button to fast forward the current song.
- i. Press the “REV” button to backward the current song.
- j. Press “16:9” button to switch Aspect ratio: Normal/Widescreen.
- k. Press the “VIDEO (RED)” button to go to VIDEO interface.
- l. Press the “PHOTO (GREEN)” button to go to PHOTO interface.
- m. Press the “SETUP” button to go to SETTINGS interface.
- n. Press the “RETURN” button to go back to the previous screen.
- o. Press the “HOME” button to exit back to the homepage.

Applications

- The applications includes **YouTube** and the flash games with format “.swf” on USB or SD card or shared directories from Local Network. We will continue to develop additional applications, and these will be available on the new firmware. Please check out the website for firmware update frequently.

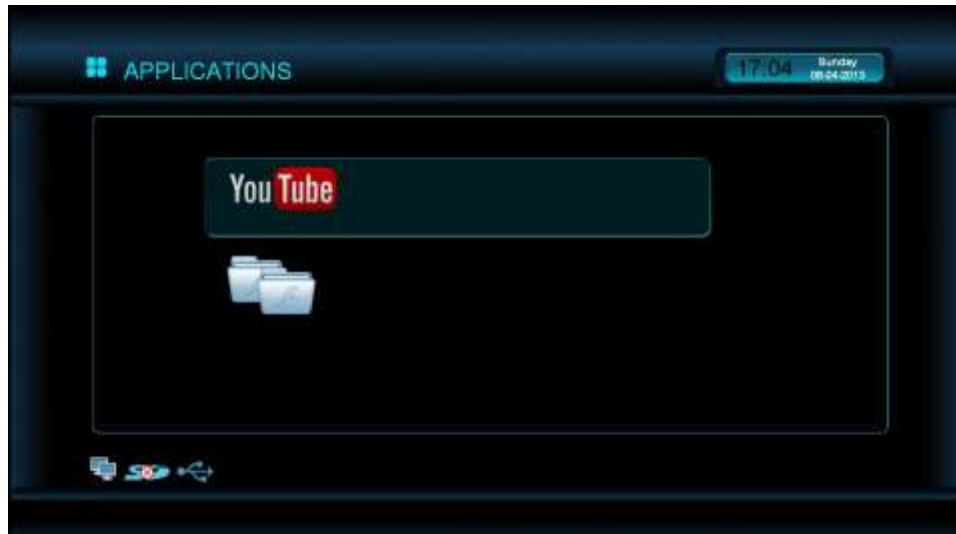

- The **Applications** folder allows users to access flash games that they downloaded from “Game” menu on <http://www.ceenee.com>. To access the games, please do the following:
 1. Select the “Applications” tab on the CeeNee Mini home page. Next, choose the “Applications” button and press the “OK” button on the remote.
 2. Organizing application: Folder, All, and Search.



3. In the application browser screen:
 - a. Press the “OK”, “PLAY” or “RIGHT ARROW” button to select a USB, a SD card, or shared directories from Local Network.
 - b. Searching: Use the NUMBER PAD and press “OK” button to search. Press “DELETE” button if you need to delete a character in the search box.
 - c. Press the ►► or ◀◀ button to display the next/previous page in the application list.
 - d. Browse to the application to play, and select the application by pressing the “OK” or “RIGHT ARROW” button on the remote.
 - e. Press the “VIDEO (RED)” button to go to VIDEO interface.
 - f. Press the “PHOTO (GREEN)” button to go to PHOTO interface.
 - g. Press the “KARAOKE (YELLOW)” button to go to KARAOKE interface.
 - h. Press the “SETUP” button to go to SETTINGS interface.
 - i. Press the “HOME” button to get back to the home page.
4. In the application player screen:
 - a. Press the “RETURN” button to get back to the previous screen
 - b. Press the “HOME” button to get back to the homepage

Settings

Two methods of Settings interface:

- Select the “Settings” button in the CeeNee Mini homepage, and press the “OK” or ”PLAY” button on the remote control.
- Press the “SETUP” button anywhere except when you are viewing the Application or YouTube.

The “Settings” menu has options to change features and settings in the CeeNee Mini.

1. Video-Audio

- The menu and submenu can change the output of Video and Audio.
 - To access the submenus on the right: Use the 4-way arrows on the remote, press the “RIGHT ARROW” button and select “Video output,” “Resolution,” etc.
- a. Video Output:** Change the output of video between HDMI and Composite. Default is “HDMI”.



- b. Resolution:** Change the size of the screen from 480i all the way to 1080p60Hz. Default is “Auto”.



- c. **Aspect Ratio:** Change the screen format to either 4:3 “Normal” or to 16:9 “Widescreen”. Default is “Widescreen”.



- d. **NTSC/PAL:** American Television is displayed in NTSC format—this is default if the CeeNee Mini was purchased in America. PAL is default for Asian and European countries.



e. Digital Audio Output: includes two parts

+ HDMI Audio: change the audio format to either PCM or Bit Stream. PCM is for stereo sound, and Bit Stream is for pass through digital audio, especially for DTS movies and/or Dolby digital movies. Default is “PCM”.



+ S/PDIF Audio: (Sony/Philips Digital Interconnect Format) is for optical sound. It is used for transporting high quality digital audio signals to transmit or receive. You have two options when you select S/PDIF: PCM or Bit Stream. PCM is for stereo sound; Bit Stream is to pass through digital audio, especially for DTS movies and/or Dolby digital movies. Default is “PCM”.



The Video, Music, and Photo menu change the way how the content is played back.

2. Video

- a. **Video sequence:** Adjust the frequency of video playback to either play just once, or repeat. Default is “Normal”.



3. Music

- a. **Music sequence:** Adjust the frequency of music playback to Normal, Repeat One, Repeat All, Shuffle, Repeat All and Shuffle. Default is “Normal”.



4. Photo

- a. **Sequence:** Adjust the frequency of photo playback to Normal, Shuffle, Repeat All, Repeat All and Shuffle. Default is “Normal”.



- b. **Photo scaling:** Option to enlarge photo to fill the screen. Default is “Fit to screen”.



- c. **Transition Effect:** Enable fade-out between photos during photo slideshow playback. Default is “Normal”.



- d. **Interval:** Define the amount of time between playbacks of photos. Default is “5 seconds”.



5. Karaoke

a. Karaoke Type

- CeeNee requests every user to create folder with the name called "Karaoke" on the external HDD and put all the karaoke songs in this folder.
- CeeNee firmware can play karaoke songs directly from this folder without any extra effort.
- If at all user wants to have a separate folder for the karaoke songs other than the name mentioned above. It's very simple to setup you karaoke source:

b. Playback Option



When finish a Karaoke song and don't have any queue song in Karaoke interface:

- If you select "Playback Option" is "Random", CeeNee Mini will select a random song in the Karaoke folder to play.
- And if you select "Playback Option" is "Sequence", CeeNee Mini will play the next song in the Karaoke folder automatically.

c. HD karaoke



- i. **Select Folder:** You can view the folders on your attached HDD and you can select the folder that contains karaoke songs. Go to the Karaoke folder and firmware will display the songs from the selected resource.





- ii. **Deselect Folder:** You can view the folders on your attached HDD and you can deselect the folder that contains karaoke songs.



d. MP3 Karaoke

- i. **BG Mode:** User has freedom to play any video or photo background while playing Mp3 karaoke. Select the Background mode as "Photo" or "Video".



Select BG: Select the resource for the background (video/photo): Choose the folder which contains the photos or the video that you want to play in the background while playing the Mp3 karaoke songs.



Go to the Karaoke and firmware will display the Mp3 karaoke songs from the "Karaoke folder" and it will start playing the user selected background.

Note: If the user selected background is very big in size and contents then CeeNee will switch to its default mode in order to make sure smooth karaoke playback. Firmware will start playing Nature photos or the ocean video automatically it encounters the problem in playing user selected background.

- ii. **Deselect background:** Remove the resource for the background (video/photo):



6. System

- a. **Language:** Option to change the languages: English, Vietnamese, and Spanish



- b. **Screensaver delay:** Set the amount of time before the screensaver is turned on. Default is “10 minutes”.



- c. **Update firmware:** Download the firmware and upgrade the device to the most current firmware.



- d. **Set time:** Display time on the Clock



- e. **About:** Describe the product, firmware, and Linux version



7. Network

- a. **Wire IP:** To change the method of IP address retrieval to either “On” (DHCP) or “Off” (Static). First, select “Mode Auto IP” and then press the “OK” button on the remote to switch between “On” and “Off.” To change the “IP Address” and other settings, select the settings, press “OK,” and then use the onscreen keyboard to enter the numbers.



- b. **Time:** Adjust the “Time Zone” to match the user’s local time. “Time Server” is the location the time is updated from.



- c. **Stock:** Information about stock index will be displayed on the Home page. To change stock index, press the “OK” button and enter the stock index which you wish to replace.



- d. **RSS:** Information about RSS is displayed on the Home page
- Adding RSS: to add a RSS feed for Home page, press the “OK” button, enter the link which you wish, and select **Apply** tab.
 - Removing RSS: to remove an existing RSS on Home page, press the “OK” button will display a link and the link will change if you continue to press the “OK” button. Select **Apply** tab to remove the link which you chose.



8. Shared Network

- a. **Requirement:** enable windows file sharing over the network.
- b. **There are two ways to get directory from shared network:**
 - ✓ **Way 1:** Enter location, username, and password directly.



- ✓ **Way 2:** Browse through your network to your shared computer to share a folder.
Enter the Username and Password for your shared folder.

Step 1: Select a work group



Step 2: Select a Computer/NAS and press “OK”



Step 3: Select a directory, enter Username and Password (optional) and select the + icon to add it.



Codec support

Video Containers

- MPEG1/2/4 Elementary (M1V, M2V, M4V)
- MPEG1/2 PS (M2P, MPG, DAT, VOB)
- MPEG2 Transport Stream (TS, TP, TRP, M2T, M2TS, MTS)
- AVI, ASF, WMV
- Matroska (MKV)
- MOV (H.264), MP4, RMP4
- FLV (only support H264)
- MP3+G, CD+G, MP3+XML

Video Code Format

- XVID SD/HD
- MPEG-1
- MPEG-2 MP@HL
- MPEG-4.2 ASP@L5, 720p, 1-point GMC
- MPEG-4.10 (H.264)
- BP@L3
- MP@L4.0
- HP@L4.0
- HP@L4.1
- WMV9
- MP@HL
- SMPTE 421M (VC-1)
- MP@HL
- AP@L3

Audio Containers

- AAC, M4A
- MPEG audio (MP1, MP2, MP3, MPA)
- WAV
- FLAC
- OGG

Audio Codec Format

- DTS
- Dolby
 - Dolby Digital
 - Dolby Digital Plus
 - Dolby TrueHD
- MPEG
- AAC, HE-AAC
- DRA
- FLAC

Photo Containers

- JPEG, BMP, PNG, GIF

CeeNee Technical Support

Important: Should you encounter any problem, please do not return this product to the store before carefully reading the user manual. You can also find answers for your technical support questions through e-mail support service at support@ceenee.com. Besides, we also provide the page <http://support.ceenee.com/create-new-ticket/> so you can create a new ticket. If you still need assistance, please visit us at www.ceenee.com

Your CeeNee product includes one year manufacturer's limited warranty and a free lifetime technical support. Tampering and misusing the product will lead to warranty avoidance. The lifetime period commences on the date of your first telephone contact with CeeNee technical support. To keep you informed of new features and services, remember to register your CeeNee product online at <https://ceenee.com/wp-signup.php>

Troubleshooting

Problem	Solution
DISPLAY	
The TV screen is blank and the CeeNee player power LED remains off.	<ul style="list-style-type: none"> • Make sure the TV is turned on. • Make sure that the power adapter and power outlet are okay. • Make sure that the interface cable is properly attached to the correct terminals on both the TV and the CeeNee player.
The TV screen is blank and the CeeNee player power LED is ON.	<ul style="list-style-type: none"> • Make sure the TV is turned on. • Make sure that the interface cable is properly attached to the correct terminals on both the TV and the CeeNee player. • Press the reset button for 10 seconds.
The TV screen is blinking and fuzzy.	<ul style="list-style-type: none"> • Make sure that the interface cable is properly inserted on both the TV and the CeeNee player. • Make sure the CeeNee player power LED is on. • If you are using a standard definition TV, Make sure that the Composite option is selected as the video output. • If you are using an LCD TV, Make sure that the HDMI option is selected as the video output. • Make sure that the video resolution option is set as Auto. • Make sure the TV system setting matches the system used in your region.
The pictures are distorted on display screens.	<ul style="list-style-type: none"> • Navigate to the Settings Photo and select Keep as original or Fit to screen in the Photo Scaling field
FILES	
Some of the media files do not play.	<ul style="list-style-type: none"> • Verify compatibility of the media file with the CeeNee player. Refer to “Supported formats” in

	user manual.
AUDIO	
There is no sound.	<ul style="list-style-type: none"> • Make sure the volume on the entertainment unit is not muted. • Make sure the correct audio output setting is selected. • If you are using an optical and/or HDMI connection, make sure the entertainment unit is capable of processing bit streams otherwise PCM setting should be selected.
USB DEVICE	
The attached USB device is not visible on the Home screen.	<ul style="list-style-type: none"> • CeeNee Network Media Player only supports mass USB storage modes. Make sure that the USB device is configured as a "mass storage device." • Make sure the USB device's file system is supported (NTFS, FAT/FAT32)
REMOTE CONTROL	
The CeeNee player remote control does not work.	<ul style="list-style-type: none"> • Press only one button at a time. • Make sure the batteries are properly inserted. • The batteries may already be drained out. Replace batteries with new ones. • Make sure that the path between the remote control and the CeeNee player is not blocked.

For latest information, please go to our website

<http://support.ceenee.com>

HISTORY

Created/Modified By	Date	Revision	Comment
HMHT	09/04/2012	1.0	First release
HMHT	08/06/2013	2.0	Second release